

#### SPECIFICATIONS

- Also measures volume of milk and water
- Unit conversion feature
- Weight: grams, pounds and ounces - Volume: milliliter and fluid ounces
- Automatic conversion feature imperial / metric
- 7ero and tare functions
- Low battery and overload indicators
- Auto-off after two minutes or manual-off
- Capacity: 11 lb / 5 kg
- Accuracy: 0.1 oz / 1 g

#### **BATTERY**


- Requires one 3V lithium battery (included).
- Remove isolation sheet before use.

#### TO REPLACE BATTERY



- Open battery case cover on the back of the scale.
- Remove old battery by using a sharp object, as shown
- Install new battery by putting one side of the battery
- Close battery case cover.

#### LCD SCREEN

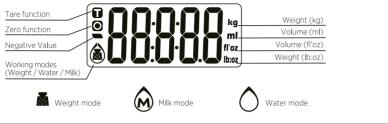


#### **BUTTONS**




### MODE | Mode and unit conversion
 
#### WORKING MODE / UNIT CONVERSION




Press (MODE) button to switch the mode and unit.

#### **WEIGHING MODE**

 

- Place the scale on a solid and flat surface. • Press ( button to turn on the scale.
- Wait until LCD shows "0" to start weighing. • Wait until LCD shows "0" to start weighin Press (MODE) button to convert to weight
  - Load weighing object on scale. LCD will show the weight reading.


#### **VOLUME WEIGHING MODE**

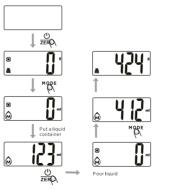

- Place the scale on a solid and flat surface,
- Press ( button to turn on the scale.
- Wait until LCD screen shows "0" to start weighing. Press (MODE) button to convert scale to water or milk mode.
- Place a bowl or container on the weighing platform. LCD screen indicates the weight of the bowl or container, Press ( b) button to reset the LCD screen at "0".
- Pour liquid (water or milk) into the bowl or container. LCD screen indicates the volume of the liquid (water or milk).

#### **ZERO AND TARE FUNCTIONS**

 The zero and tare functions allow you to weigh items consecutively without having to remove the article already on the platform. For example, if you are using a bowl, these functions allow you to weigh the content of the bowl without counting the weight of the bowl. Press (v) to use these functions.



#### Zero function

 
When sum of all loads on scale is less than 7 oz (200 g), the LCD will show "0 g" each time  $\left(\frac{0}{2ERO}\right)$  button is pressed. Icon "o" will show on left of LCD, indicating zero function is activated. The maximum capacity of the scale will not be reduced by the stated weight if it is 7 oz (200 g) or less.

# Tare function

When sum of all loads on scale is over 7 oz (200 g), the LCD will show "0 g" each time  $\left(\frac{0}{2ER0}\right)$  button is pressed. Icon "T" will show on left upper corner of LCD, indicating tare function is activated. Maximum weight capacity is reduced by tare amount.

Under this condition, if you press  $\left(\frac{\phi}{\sqrt{r_{EBO}}}\right)$  button, you will see the total weight of all loads.


#### **AUTO SHUT OFF & MANUALLY SHUT OFF**



Auto shut off occurs if display shows "0" or shows the same weight reading for 2 minutes.

To maximize battery life, it is recommended to shut 5. DO NOT use chemical or abrasive cleaning agents. off manually the scale. Press  $\left(\frac{0}{2EB0}\right)$  button for 3 seconds 6. Not for commercial use. and the scale will turn off.

#### **LOW BATTERY & OVERLOAD INDICATORS**

 

#### 2. Overload

1. Low battery power

Please replace battery

Remove item to avoid damage. Maximum capacity for this scale is 11 lb / 5 kg.

## Starfrit.com

3. Avoid contact with water. DO NOT immerse the scale in water.

4. All plastic parts should be cleaned immediately after contact with fail

spices, vinegar and strongly flavored/colored food. Avoid contact with



SUBSCRIBE TO THE NEWSLETTER TO LEARN MORE ABOUT OUR PROMOTIONS

**ADVISE FOR USE & CARE** 

acid citrus iuices.

1. Always use the scale on a hard flat surface.

2. Clean the scale with a slightly damp cloth.

PRINTED IN CHINA FOR : ATLANTIC PROMOTIONS INC. LONGUEUIL (QUÉBEC) J4G 1V6 CUSTOMER SERVICE: STARFRIT.COM/EN/CONTACT-US