

# Starfrit

HIGH PRECISION SCALE



**INSTRUCTIONS FOR USE**

# INSTRUCTIONS FOR USE

## FEATURES / SPECIFICATIONS

- Stainless steel platform
  - High precision strain gauge sensor
  - LCD screen easy to read
  - Automatic conversion feature imperial / metric
  - Low battery and overload indicators
  - Zero and tare functions
  - Capacity: 17 oz / 500 g
  - Accuracy: 0.005 oz / 0.1 g
- 

## BATTERY


- Requires 1 x 3V lithium battery (included).
  - Remove insulation sheet before use.
- 

## TO REPLACE BATTERY



- Open battery case cover underneath the scale.
- Take out the used battery and install new one. Make sure to respect the polarity.
- Close battery case cover.


## LCD SCREEN

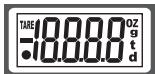

- |      |                                      |    |        |
|------|--------------------------------------|----|--------|
| TARE | Tare Weight                          | oz | Ounces |
| ■    | Negative Value                       | g  | Grams  |
| ○    | Reset to zero and automatic shutdown | t  | Ozt    |
|      |                                      | d  | Dwt    |

---


## WEIGHING MODE

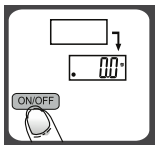

- Place the scale on a solid and flat surface.
- Press “ON/OFF” button to turn on the scale
- Wait until LCD screen shows “0.0” to start weighing.
- Press “UNIT” button to convert to weight mode if needed.
- Load weighing object on scale. Always place the object in the center of the platform. LCD screen will show the weight reading.

---

## UNIT CONVERSION

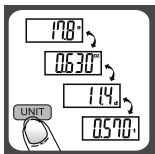


Press “UNIT” button to switch the weight measure.

## ZERO AND TARE FUNCTION

To weigh different loads consecutively without removing loads from the scale, put the first load on the scale to obtain a weight reading. Press “Z/T” button to reset the LCD reading to “0.0” before adding next load. You can repeat operation.


### ZERO FUNCTION

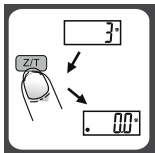

When sum of all loads on scale is less than 0.7 oz (20 g), the LCD will show “0 g” each time “Z/T” button is pressed. Icon “o” will show on the lower left corner of LCD screen, indicating zero function is activated. The maximum capacity of the scale will not be reduced by the stated weight if it’s 0.7 oz (20 g) or less.

---


### TARE FUNCTION

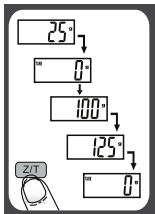

When sum of all loads on scale is over 0.7 oz (20 g), the LCD will show “0 g” each time “Z/T” button is pressed. Icon “TARE” will show on left upper corner of LCD screen, indicating tare function is activated. Maximum weight capacity is reduced by tare amount.

Under this condition, if you press “Z/T” button, you can see the total weight of all loads on the scale. If you want to weight more loads, just press “Z/T” to reset LCD reading to “0.0 g” again.

## AUTO SHUT OFF & MANUALLY SHUT OFF

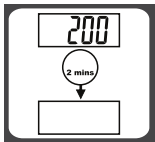


Auto shut off occurs if display shows "0" or shows the same weight reading for 2 minutes.

To maximize battery life, it is recommended to shut off manually the scale. Press "ON/OFF" button for 3 seconds and the scale will turn off.

---

## LOW BATTERY AND OVERLOAD INDICATORS

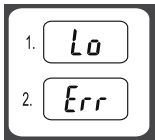

### 1. Low battery power

Please replace battery.

### 2. Overload

Remove item to avoid damage. Maximum capacity of this scale is 17 oz / 500 g.

## ADVICE FOR USE & CARE

- Always use the scale on a hard flat surface.
- Clean the scale with a slightly damp cloth.
- Avoid contact with water. DO NOT immerse the scale in water.
- All plastic parts should be cleaned immediately after contact with fat, spices, vinegar and strongly flavored /colored food.
- Avoid contact with acid citrus juices.
- DO NOT use chemical or abrasive cleaning agents.
- Not for commercial use.

# Starfrit<sup>®</sup>.COM



[facebook.com/starfrit](https://facebook.com/starfrit)

SUBSCRIBE TO THE NEWSLETTER TO LEARN MORE ABOUT OUR PROMOTIONS!



PRINTED IN CHINA FOR : ATLANTIC PROMOTIONS INC, LONGUEUIL (QUÉBEC) J4G 1V6  
CUSTOMER SERVICE : [STARFRIT.COM/EN/CONTACT-US](https://STARFRIT.COM/EN/CONTACT-US)