Starfrit INSTRUCTIONS FOR USE

Gauge Plate Thumb Guard Serrated Blade Blade-Locking Screw Thickness-Locking Screw Thickness Adjustment Knob **Measuring Guide**

Suction base lever

Suction base

ASSEMBLY

WASH THE APPLIANCE BEFORE THE FIRST USE. PLEASE REFER TO THE CLEANING SECTION IN THIS BOOKLET

Place the unit in front of you the handle must be facing your right hand.

3. To secure the unit, to activate the suction base.

WARNING: place the unit on a clean, flat and

Install the handle.


Push until it clicks.


non-textured surface.




Align the blade with the blade-locking screw hole. Insert the blade-locking screw and turn clockwise untill it clicks to secure the blade on the unit.

WARNING - SHARP BLADE: don't put your hands on the serrated edge.

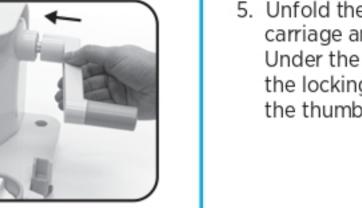

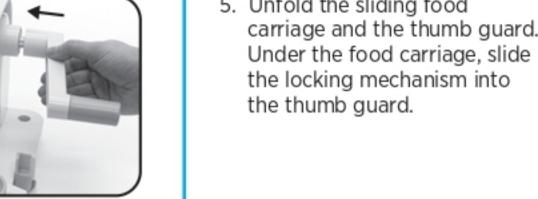




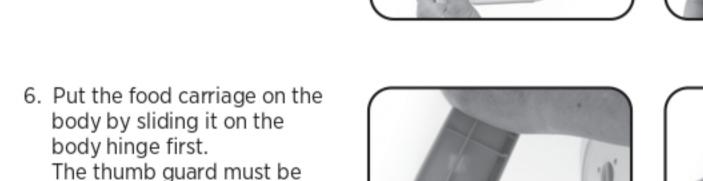





facing your left hand.

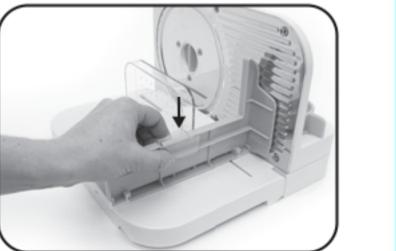

HOW TO USE

- Assemble the Deli Slicer by carefuly following Assembly Directives.
- Place the slicer on a clean, flat and non-textured surface and toggle the lever up to activate the suction base. Then toggle the lever down to secure the unit. Repeat this operation whenever needed, the product must always be stable while in use.
- Place your food on the sliding food carriage. Make sure that your food is in direct contact with the thumb guard and the gauge plate. Secure your food by placing the food pusher





SLICE THICKNESS ADJUSMENT

. Unlock the thickness-locking screw by turning counter-clockwise. Select a thickness by turning the adjustment knob. Once the thickness is selected, turn the thickness-locking screw clockwise to lock-in the thickness

Note: Deli Slicer cuts from deli thin to 1" (2.5 cm), the measuring guide represents cutting increments.



- 5. The Deli Slicer is a double motion operated kitchen tool. Both hands need to make disctinct motions. One hand guides the food through the blade while the other hand activates the handle. a) Right Hand: Turn the handle clockwise and the blade will start spinning. The blade turn ratio
- is 2:1. Keep a steady pace while turning the handle to keep a smooth and straight cut.
- b) **Left Hand:** Slide the food carriage by holding the thumb guard and the food pusher together. Once again keep a steady pace to have straight cuts.

A smooth combination of motions between both hands results in the straightest cuts.



CLEANING


- Wash the appliance before the first use.
- Carefuly remove the blade by turning the blade-locking screw counterclockwise (1/4 turn). Hand wash in warm soapy water.

WARNING sharp blade: don't put your hands on the serrated edge

All other parts are dishwasher safe but they must be disassembled first.

STORAGE

All pieces are nestable. First, insert the handle in its holder. Then clip the food carriage and food pusher under the body i

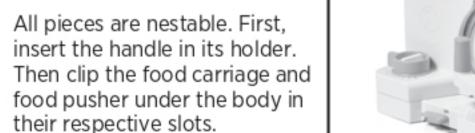



www. Starfrit.com

■ WARNING SHARP BLADES

this item to avoid injury.

Be careful when using and washing



SUBSCRIBE TO THE NEWSLETTER TO LEARN MORE ABOUT OUR PROMOTIONS

Patent pending

PRINTED IN CHINA FOR: ATLANTIC PROMOTIONS INC. LONGUEUIL (QUÉBEC) J4G 1V6
CUSTOMER SERVICE: 1-800-361-6232 / MTL AREA: (514) 871-1095