Starfrit DIGITAL KITCHEN SCALE



INSTRUCTIONS FOR USE

SPECIFICATIONS

- Glass weighing platform Also measures volume of milk and water
- Unit conversion feature
- Weight: grams, pounds and ounces
- Volume: milliliter and fluid ounces
- Automatic conversion feature imperial / metric
- Zero and tare functions
- Low battery and overload indicators
- Auto-off after two minutes or manual-off
- Capacity: 11 lb / 5 kg
- Accuracy: 0.1 oz / 1 g

BATTERIES



- Requires 2 AAA batteries (included)
- Remove isolation sheet before use

TO REPLACE BATTERIES

- Open battery case cover underneath the scale.
- Take out the used batteries and install new ones. Make sure to respect the polarity.
- Close battery case cover.

Working modes (weight/water/milk

MODE | Mode and unit conversion

LCD SCREEN

BUTTONS

kg. ml. ff'oz. lb:oz Volume (ml)

Turn ON / Turn OFF / Zero and Tare functions

WORKING MODES / UNIT CONVERSION

Water volume mode

Press (UNIT) button to switch the mode and unit.

) Water mode

Milk volume mode


Weight mode

Weight mode

weighing. Press (บทา) button to convert to weight mode if needed

Load weighing object on scale, LCD will show the weight reading.

VOLUME WEIGHING MODE

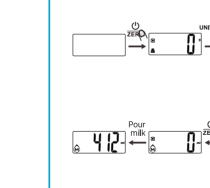

WEIGHING MODE

 Place the scale on a solid and flat surface. • Press (button to turn on the scale.

• Place the scale on a solid and flat surface.

 
• Press (b) button to turn on the scale.

• Wait until LCD screen shows "0" to start

- Wait until LCD screen shows "0" to start weiahina. Press (บทา) button to convert to scale to water or milk mode.
- Place a bowl or container on the weighing platform. LCD screen indicates the weight of the bowl or container. Press (b) button to reset the LCD screen at "0".
- Pour liquid (water or milk) into the bowl or container. LCD screen indicates the volume of the liquid (water or milk).

ZERO AND TARE FUNCTIONS

The zero and tare functions allow you to weigh items consecutively without having to remove the article already on the platform. For example, if you are using a bowl, these functions allow you to weigh the content of the bowl without counting the weight of the bowl. Press $\left(\frac{0}{2ERO}\right)$ to use these functions.



. **603**°

Zero function


When sum of all loads on scale is less than 7 oz (200 g), the LCD will show "0 g" each time $\left(\frac{0}{2ERO}\right)$ button is pressed. Icon "o" will show on left of LCD, indicating zero function is activated. The maximum capacity of the scale will not be reduced by the stated weight if it is 7 oz (200 g) or less.

Tare function

When sum of all loads on scale is over 7 oz (200 g), the LCD will show "0 g" each time $\left(\frac{0}{7500}\right)$ button is pressed. Icon "T" will show on left upper corner of LCD, indicating tare function is activated. Maximum weight capacity is reduced by tare

is condition, if you press $(\frac{0}{2ERO})$ button, you will see the total weight of all loads.


AUTO SHUT OFF & MANUALLY SHUT OFF

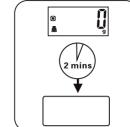

Auto shut off occurs if display shows "0" or shows the same weight reading for 2 minutes.

To maximize batteries life, it is recommended to shut 5. DO NOT use chemical or abrasive cleaning agents. off manually the scale. Press $(\frac{0}{2000})$ button for 3 6. Not for commercial use. seconds and the scale will turn off.

 LOW BATTERY & OVERLOAD INDICATORS



Please replace batteries 2. Overload

1. Low battery power

Remove item to avoid damage Maximum capacity for this scale is 11 lb / 5 kg.

Starfrit.com

3. Avoid contact with water. DO NOT immerse the scale in water.

4. All plastic parts should be cleaned immediately after contact with fat

spices, vinegar and strongly flavored/colored food. Avoid contact with

ADVISE FOR USE & CARE

acid citrus iuices.

1. Always use the scale on a hard flat surface.

2. Clean the scale with a slightly damp cloth.



SUBSCRIBE TO THE NEWSLETTER TO LEARN MORE ABOUT OUR PROMOTIONS

PRINTED IN CHINA FOR: ATLANTIC PROMOTIONS INC. LONGUEUIL (QUÉBEC) J4G 1V6
CUSTOMER SERVICE: STARFRIT.COM/EN/CONTACT-US