


Starfrit

FRY CUTTER

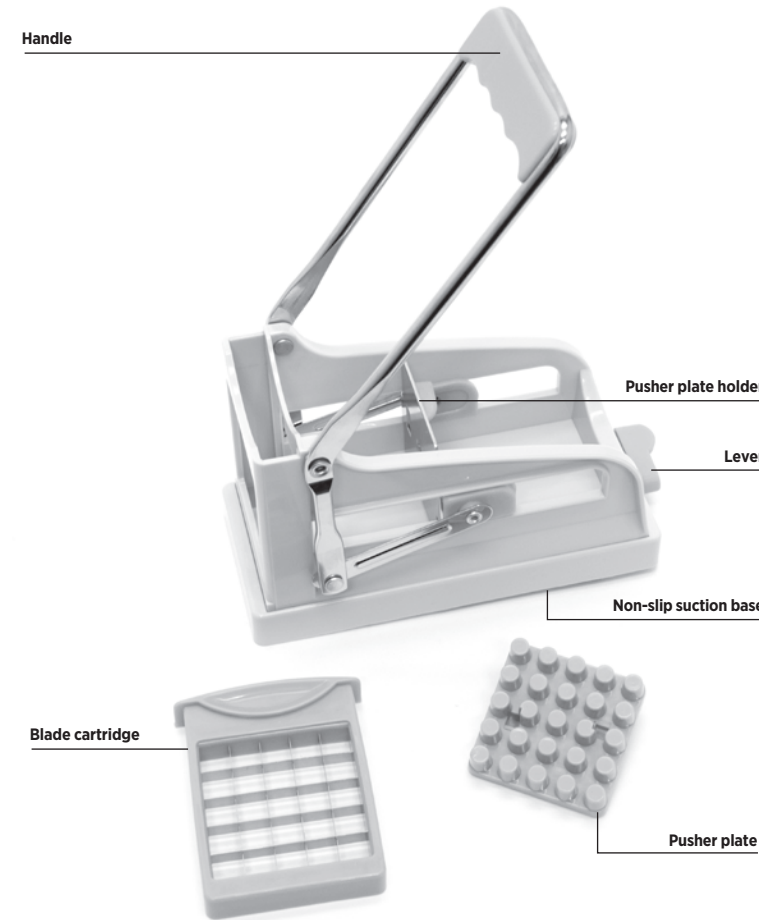

INSTRUCTIONS FOR USE



ASSEMBLY

1. Lift the handle so that it stands vertically.
2. Insert the pusher plate in its holder.
3. Lock the pusher plate by turning it counterclockwise.
4. Slide the blade cartridge into its compartment until the end.

Ensure that the front (side without cavities) of the blade cartridge is facing the front of the product.




The back (side with cavities) of the blade cartridge should face the pusher plate.






WARNING sharp blade: hold the blade cartridge by the plastic frame.

5. Toggle the lever to the right to secure the unit.
WARNING: always make sure to place the unit on a clean, flat and non-textured surface.

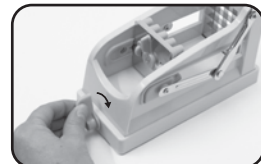


HOW TO USE

1. Lift the handle so that it stands vertically.
2. Insert the food into the cavity (between the pusher plate and the blade cartridge).
WARNING: always make sure that the food does not exceed maximum height and width of the square blade cartridge. If your food exceeds 6 cm (H) x 6 cm (D) x 8 cm (L), we recommend trimming it.
TIP: If you have to trim your potato make sure that the trimmed part is NOT facing the blade otherwise it will be harder to cut.

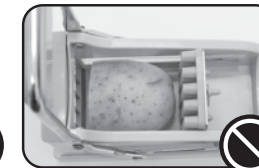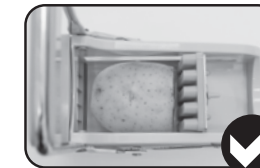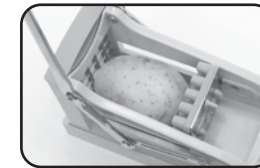

3. Lower the handle firmly.

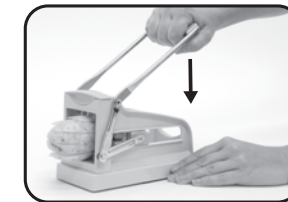

4. Repeat steps 1 to 3 as many times as necessary.



CLEANING

Wash before first use.
Disassemble all parts and wash them in warm soapy water.
The blade cartridge and the pusher plate are dishwasher safe.

MULTI-USE: Perfect for sticks of potato, carrot, cucumber, zucchini, apple, ham and much more.

! WARNING SHARP BLADES
Be careful when using and washing this item to avoid injury.

www.Starfrit.com  www.facebook.com/starfrit

SUBSCRIBE TO THE NEWSLETTER TO LEARN MORE ABOUT OUR PROMOTIONS!

PRINTED IN CHINA FOR : ATLANTIC PROMOTIONS INC. LONGUEUIL (QUÉBEC) J4G 1V6
CUSTOMER SERVICE : 1-800-361-6232 / MTL AREA : (514) 871-1095