


**Starfrit**  
**balance**


**Large Screen  
Electronic Glass Scale**  
Instructions for use

## Batteries



2 x 1.5V AAA batteries (included).


## To replace batteries

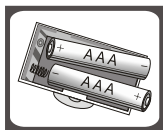

- 1 Open battery case cover on the back of scale.
- 2 Take out the used batteries.
- 3 Install new batteries by putting one side of the battery then pressing down the other side. Please take note to the polarity.

- Do not dispose of batteries in fire. Batteries may explode or leak.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Please dispose the batteries according to local municipal regulations.

## Automatic shut off

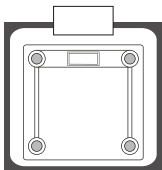

When you step off the scale, it will automatically shut off. Auto shut-off occurs if display shows the same weight reading for approximately 8 seconds.

## Operation



### Step 1

Put the scale on a hard and flat surface. Avoid carpet or soft surfaces.




### Step 2

Gently step on the scale, then the scale will automatically turn on. Stand evenly on the scale without moving and wait until your weight shown on display is stable and locked.

# To convert weight unit


Scale has an automatic conversion feature which allows you to weigh units in metric (kg) and imperial (lb).



1. You will find the switch on the back of the scale, top left corner.
2. Push right or left the unit switch to convert scale unit between kg / lb.

---

## Overload indication



Scale overload.  
Maximum weight capacity is 330 lb / 150 kg.  
Please step off to avoid damage.

---

## Low battery indication



Battery power is low.  
Please install new batteries.

---

## Re-test



Display "L" when you step off the scale, means there was an error in the weigh reading. Please re-test.

## Advise for use & care

1. The glass platform will be slippery if it is wet.
2. Keep standing still during the course of weighing.
3. DO NOT strike, shock or drop the scale.
4. Treat the scale with care as it is a precise instrument.
5. Clean the scale with a damp cloth and avoid water getting inside the scale.  
DO NOT use chemical or abrasive cleaning agents.
6. Keep the scale in a cool place with dry air.
7. Always keep your scale in a horizontal position.
8. If the scale does not turn on, check whether the batteries are installed or battery power is low. Replace the batteries.
9. If there is an error message on the display or if the scale does not turn off, remove the batteries for about 3 seconds, then install them again. If you cannot resolve the problem, please contact your dealer for consultation.
10. Not for commercial use.



**[www.facebook.com/starfrit](http://www.facebook.com/starfrit)**